
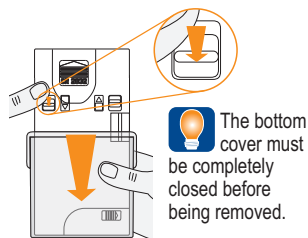



System setup

1 Removing the covers

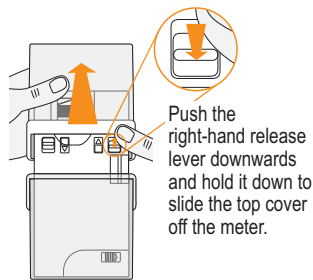


Push the left-hand release lever downwards and hold it down to slide the bottom cover off the meter.

2 Inserting/replacing the test strip cartridge

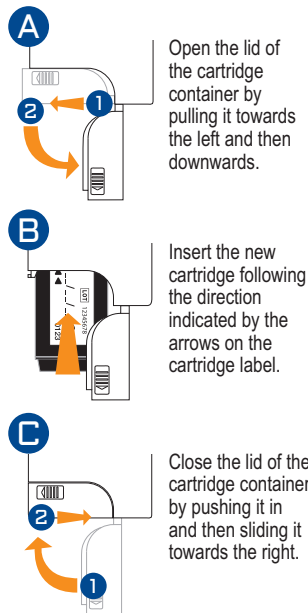

3 Inserting/replacing the lancet

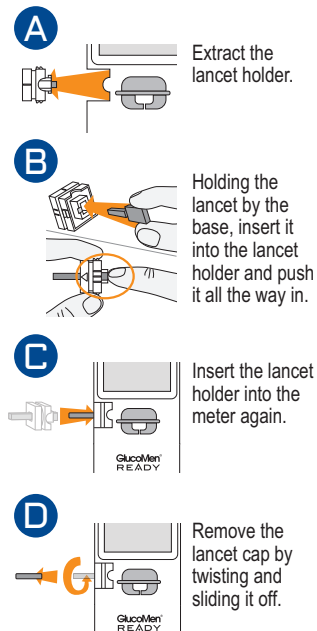

4 Replacing the covers

